

Strom Plumbing

BY

Sign of the Crab

Ph: (916) 638-2722 / Fax: (916) 638-2725

Installation Information

Item #P1006


Adjustable Bridge Faucet, 4" – 6" centers

Warranted only if installed by a qualified licensed plumber. Use Teflon tape on all threaded connections.


Minimum hole size in sink or deck is 1" diameter

Maximum deck/sink thickness is 1 ¼"

1. Shut off the water supply before installation.
2. Minimum hole size of 1" is required in sink or deck at 4" or 6".
3. Faucet centers can be varied by loosening the two decorative nuts on the center tubes and swiveling. Please use caution when tightening to protect the finish.
4. Insert threaded shanks through the escutcheon and then through the holes in the deck or sink. Place Lockdown nuts on shanks and tighten faucet to deck.
5. Attach supply lines to the ½" IPS faucet shanks.
6. Remove the aerator from the end of the spout and turn on water supply to flush hot and cold lines until the water is clear.
7. Re-install the aerator and enjoy your beautiful faucet.
8. Make no adjustments to valves or valve stems. They are tested at the factory for optimum performance.

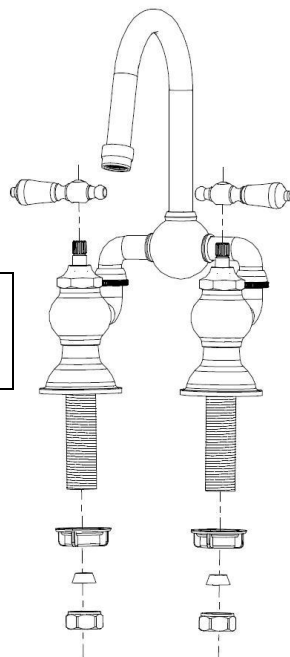

**FRONTAL VIEW WITH
INLETS AT 4" IN FRONT
OF BODY**

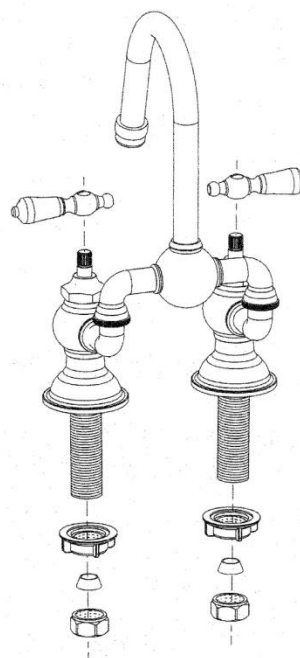

BACKSIDE VIEW