

Installation Information

Item #P0958 – Deck Mount Thermostatic Tub Shower Enclosure Set with Handheld Shower

Warranted only if installed by a qualified licensed plumber.

Step 1 – Faucet installation


1. Shut off the water supply to the fixture before installation.
2. Connect the shorter threaded ends of the hook-up nipples to the deck mount couplers. Loosely attach the deck mount coupler nuts to the faucet. Insert the faucet through the 2 holes in the deck. Screw the lock nuts onto the threaded nipples and tighten.
3. Tighten the nuts of the deck mount couplers to the faucet body.
4. Make no adjustments to valves or valve stems. They are tested at the factory for optimum performance.

This faucet is tested to remain within 1 degree Fahrenheit of your desired setting throughout its operation, with an automatic temperature stop at 104 degrees Fahrenheit. The unit also has a built-in anti-syphon.

Step 2 – Shower Riser, Enclosure and Shower Head

Assembly of Riser

5. There are 7 pieces to the riser. Assemble as pictured using a clear 2-part epoxy to secure threaded connections.

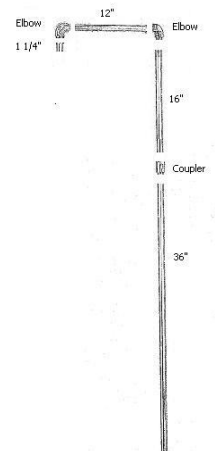

Assembly of Enclosure

6. First slip the wall tee onto the shower riser about 10" below the crook in the riser. Only tighten slightly as later an adjustment will most likely be necessary. Connect portions of the riser with the union nut.
7. **Two people are needed for the remaining steps.** Take one of the halves of the shower ring and slip it onto the wall tee. Be certain that the threaded hole is towards the outside of the ring. Insert screws and tighten.
8. Take the ceiling tee and slip the free ends of the shower ring over this part. Be certain that the threaded hole is towards the top of the ring.
9. After measuring the proper length that the wall and ceiling braces need to be, cut these pieces off at the unthreaded end to the desired length. **DO NOT TAKE THE THREADED PORTIONS OF THE BRACES INTO ACCOUNT WHEN MEASURING THE BRACES.**
10. Install the escutcheons onto the wall and ceiling in their proper positions.
11. Very carefully screw ceiling braces firmly into the ceiling tee. Take care not to flex this joint a great deal. As you then install the ceiling braces into the ceiling escutcheon and tighten the screw, someone must hold steadily the other end of the shower ring to reduce flex.
12. Very carefully screw the wall brace firmly into the wall tee and do not allow the joint to flex. You may now adjust the wall tee to the desired height on the riser. Install the wall brace into the wall escutcheon and tighten the screw.
13. Apply Teflon tape to the threaded top end of the riser and add shower head.

Step 3 – Handheld Shower

14. Attach the riser bracket onto the riser
15. Attach the tapered end of the hose to the handheld shower handle. Rest the handheld on the cradle.