

Installation Information

Item #P0971 – Thermostatic Straight Spout Faucet and Oval Shower Enclosure Set

Warranted only if installed by a qualified licensed plumber.

Step 1 – Faucet installation


1. Shut off the water supply to the fixture before installation.
2. Connect the shorter threaded ends of the hook-up nipples to the deck mount couplers.
3. Loosely attach the deck mount coupler nuts and screen washers to the faucet.
4. Insert the nipples through the 2 holes in the deck and while holding faucet in place screw the lock down nuts onto the threaded nipples and tighten to secure faucet to deck/tub.
5. Tighten the nuts of the deck mount couplers to the faucet body once positioned correctly on tub.

This faucet is tested to remain within 1 degree Fahrenheit of your desired setting throughout its operation, with an automatic temperature stop at 104 degrees Fahrenheit. The unit also has a built-in anti-syphon.

Step 2 – Shower Riser, Enclosure and Shower Head – (Riser, P0959 & P0919)

Assembly of Riser

6. There are 7 pieces to the riser. Assemble as pictured using a clear 2-part epoxy to secure threaded connections.

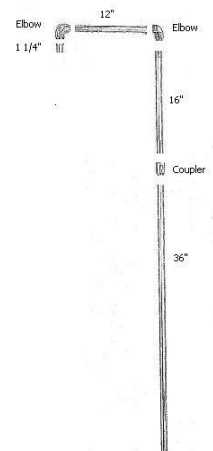

Assembly of Oval Enclosure

7. Slide the two halves of the enclosure together to form an oval.
8. Install the ceiling clamps onto the oval at both ends.
Note: The ceiling braces will restrict the flow of your shower curtain.
9. Install the wall clamp onto the oval.
10. After measuring the proper length needed of the ceiling rods and the wall support rod, you may cut these to the desired length. **CUT THE NON-THREADED END ONLY AND DO NOT INCLUDE THE THREADED PORTION IN YOUR MEASUREMENT.**
11. Install the escutcheons onto the wall & ceiling in their proper positions.
12. ***NOTE: TWO PEOPLE ARE NEEDED FOR THE REMAINING STEPS:***
Very carefully screw the ceiling braces firmly into the ceiling clamps. Do not flex the joints. Insert the ceiling braces into the ceiling escutcheons and tighten the screws. There must be someone on both ends to reduce flex.
13. Very carefully screw the wall brace firmly into the wall clamp. Install the wall brace into the wall escutcheon and tighten the screw.
14. Connect the riser to the enclosure with the C-clamp provided.
15. Attach the shower head using Teflon tape or paste on the threads.

