Strom Plumbing
BY
Sign of the Crab

Ph: (916) 638-2722 / Fax: (916) 638-2725

Installation Information

Item #P0007TE
Toe Tap - Waste & Overflow Drain Assembly

Warranted only if installed by a qualified licensed plumber. Use Teflon tape on all threaded connections.
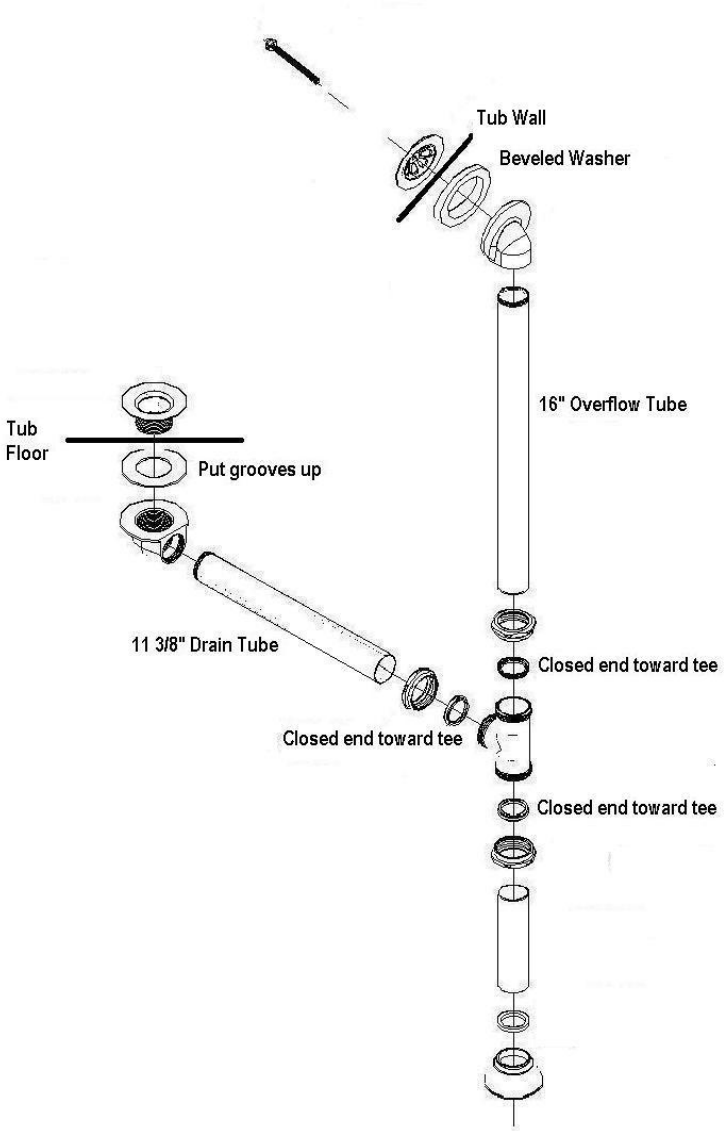
1. **Assemble parts as shown before installing to get the accurate length needed for the overflow and drain tubes.**
2. **The rough-in for the drain hole on the floor is a plumb line from the center of the roll rim on the tub to the floor.**
3. **Rough-in 1 ½" male IPS with ½" above the finished floor.**
4. **All tubing is 1 ½".**
5. **At the floor connection, use the enclosed square cut washer or the "V" washer with closed end toward connection.**